

vax[®]

Air[™]Lift
STEERABLE
PET

**POWERFUL UPRIGHT
WITH LIFT OUT CYLINDER**

LET'S GET STARTED.



U84-AL-Pe

Let's talk safety



Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

- Only use the vacuum cleaner indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the vacuum cleaner.
- Only Vax recommended tools should be used with the vacuum



Don'ts

- Don't use the vacuum cleaner if it has been dropped, damaged or left outdoors.
- Don't run over the power cord or use vacuum cleaner if the power cord or plug is damaged. Please contact our Customer Service 0330 026 8455 (Mon-Fri 08:30-18:30 Sat 09:00-17:00).
- Don't handle the plug or use the vacuum cleaner with wet hands.
- Don't pull or carry the vacuum cleaner by the power cord. Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord. Don't unplug the vacuum cleaner by pulling on the power cord.
- Don't vacuum up hard or sharp objects such as glass, nails, screws or coins etc.



Do's

- Turn off all controls on the vacuum cleaner before disconnecting or connecting the plug from the mains socket.
- Always keep the power cord away from the brushes during use. After use always wrap the power cord around the cord hooks provided.
- Always make sure both the pre-motor/post-motor filters are in place before use.
- Hold the lift out cylinder by the carry handle at all times when the lift out cylinder is detached for stair and above floor cleaning.
- Always take extra care when positioning the vacuum cleaner on the stairs.
- Always switch off the vacuum cleaner before disconnecting or connecting the hose and accessories.

cleaner, use of non-branded Vax accessories/tools will invalidate your warranty.

- This vacuum cleaner can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the vacuum cleaner in a safe way and understand the hazards involved. Children shall not play with the vacuum cleaner. Cleaning and user maintenance shall not be made by children without supervision.

- Don't vacuum up any flammable or combustible materials (lighter fluid, petrol, kerosene etc) or use the vacuum cleaner in an area with explosive vapours or liquid.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- Don't attempt to remove blockages with sharp objects as this may cause damage to the vacuum cleaner, remove blockages only as instructed in this guide.
- Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Always replace the fuse in the plug with a British 13amp fuse. Always protect the power cable from heated surfaces and open flames.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Store the vacuum cleaner in a cool, dry area. If the filters have been cleaned as per user the guide instructions ensure they are thoroughly dry before storing away.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

Thank you for buying this Air™ Lift Steerable.

Taking care of your carpets and hard floors

The Air™ Lift Steerable is designed to make vacuuming carpets and hard floors regularly, as effective and efficient as possible and this user guide will help you get the most out of your machine.

Maintaining your carpets and hard floor will ensure they keep their appearance for longer. You've chosen the carpets and hard floors for your home for a reason and Vax will help you take good care of them.

Taking care of your Air™ Lift Steerable

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your carpets and hard floors.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:











Vax Ltd., Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, Worcestershire, WR9 0LW, UK

This user guide can be found online at: vax.co.uk/support

The Vax logo is displayed in a bold, orange, sans-serif font. The letters 'v' and 'a' are lowercase, while 'x' is uppercase. A registered trademark symbol (®) is located at the top right of the 'x'.

Let us know what you think **@VaxUK**

Contents

	<u>Let's talk safety</u>
	<u>Getting to know your machine</u>
	<u>Getting started</u>
	<u>Using your machine</u>
	<u>Taking care of your machine</u>
	<u>Let's talk technical</u>
	<u>What to do if it goes wrong</u>
	<u>Getting in touch</u>
	<u>Accessories</u>
	<u>Notes</u>

Air™ Lift Steerable Pet

Included with your machine



3-in-1 Tool
(Crevice, Dusting
and Upholstery Tool)



TurboTool



Back Panel
and Floorhead



Lift Out Cylinder



Handle

Initial Setup for normal operation

1. Use the base accessories.
 - Shortest hose.
 - Extension tube set to shortest practicable length.
2. Clean filters installed.
3. Dust receptacle empty.
4. All Bleeds must be closed.
5. Floorheads/tools set to Carpet Mode for carpet cleaning.
6. Floorheads/tools set to Hard floor Mode for hard floor cleaning.

Getting to know your machine

Handle

Dirt container release button

Cylinder lift-out button

Carry handle

Dirt container lid release clip

Separator

Accessory hose

Dirt release button (hidden)

Hose end clip

Lower hose

Air vent

Brushbar indicator light

Brushbar

Hose to handle connection

Extension tube

Power On/Off button

Brushbar On/Off button

Quick release cord hook

3-in-1 Tool storage clip

Quick release cord hook

Handle release clip

Hose holder

Technical Specification

Name **Air™ Lift Steerable Pet**

Voltage **See rating label on machine for details**

Wattage **See rating label on machine for details**

Cord length **10m**

Weight **6.2kg**

Accessories & Consumables

Filter Kit (Type 98)*
1-1-134233-00

Belt Kit (Type 1)*
1-1-130669-01

Pro Cleaning Kit (Type 2)
1-1-133326-00

TurboTool (Type 6)
1-1-134419-00

3-in-1 Tool
1-1-129167-00

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

Before you begin cleaning

WARNING: Always switch off the vacuum cleaner before connecting or disconnecting the lift out cylinder/ hose/attachments or removing and emptying the dirt container.

IMPORTANT: The vacuum cleaner is equipped with a thermal cut-out. If for any reason the vacuum cleaner does overheat the thermostat will automatically turn the vacuum cleaner off. If this happens switch the vacuum cleaner off and unplug from electrical socket. Remove and empty the dirt container also check the vacuum cleaner for blockages. Allow the vacuum cleaner to cool for approximately 1 hour (if you have cleaned the filters please wait 24 hours for the filters to fully dry before putting back into the machine).

For best cleaning results, filters should be tapped over a bin every 4-6 uses to remove dirt and debris and washed every 3 to 6 months (depending on the level of use).

If the vacuum cleaner is blocked, switch off and unplug before removing the blockage.

Assembling your upright



Place the lift out cylinder onto the back panel and floor head.



In a hinge like manner push the lift out cylinder backwards until it clicks into place.



Push the handle with extension tube into the back panel of the vacuum cleaner. The handle will click into position when correctly fitted.



Place the 3-in-1 tool onto the storage clip.

Using your machine

Using with the lift out cylinder attached



Twist the quick release cord hooks and release the power cord.



Plug the vacuum cleaner into the mains and switch on.



Place foot on the floor head and pull the handle backwards to recline.



Press the On/Off button to switch the vacuum cleaner on.



Press the brushbar button to activate the brushbar. The brushbar should be ON for carpets and OFF for hard floors.



Slide the air vent cover open to reduce suction, if required on high piled carpets.



For maximum cleaning on hard floors, close the air vent cover.

When the vacuum is reclined with the brushbar switched on, never leave the vacuum in one position for any long period of time.

CAUTION




Using the hose/extension tube with the lift out cylinder attached

Always switch off the vacuum cleaner before connecting or disconnecting the hose/ tools.

For easier cleaning detach the lift out cylinder for stair and above floor cleaning. Hold the lift out cylinder by the carry handle at all times when detached.

The accessories can be attached directly to the hose or extension tube.

Using the hose

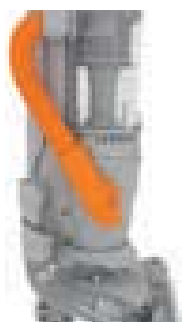

Pull and remove the accessory hose from the hose holder.



Choose an accessory.



 
Attach the tool to the end of the accessory hose.



Press the On/Off button to switch the vacuum cleaner on.

Using your machine

Using the hose with the extension tube



Press the handle release clip and lift to remove the handle with extension tube from the back panel.



Attach the hose to the handle, clipping the hose end clip over the ridge on the handle entry point.



Choose an accessory



Attach the tool to the end of the extension tube.



Press the On/Off button to switch the vacuum cleaner on.



Use the hose with extension tube for hard to reach areas.

The brushbar will not rotate when the vacuum cleaner is stood in the upright position.



Using your machine

Using the hose/extension tube with the lift out cylinder detached

CAUTION: Hold the lift out cylinder by the carry handle at all times when the lift out cylinder is detached for stair and above floor cleaning.

Using the hose



Hold the carry handle and press the lift out release button.




Lift and remove the lift out cylinder body off the back panel and floor head.



Pull and remove the accessory hose from the hose holder.



Choose an accessory.

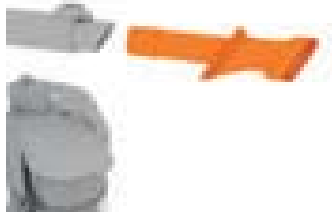

Attach the tool to the end of the accessory hose.




Press the On/Off button to switch the vacuum cleaner on.

Using the hose with the extension tube



Hold the carry handle and press the lift out cylinder release button.

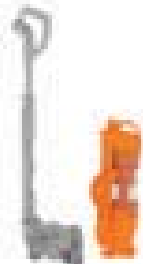

Lift and remove the lift out cylinder off the back panel and floor head.



Pull and remove the accessory hose from the hose holder.



Press the handle release clip and remove the handle with extension tube from the back panel.

Using your machine

Using the hose with the extension tube continued



Attach the hose to the handle, clipping the hose end clip over the ridge on the handle entry point.



Choose an accessory and attach tool to the end of the extension tube.




Press the On/Off button to switch the vacuum cleaner on.




Use the hose with extension tube for hard to reach areas. Hold the lift out cylinder by the carry handle at all times.

Using the stretch hose with the lift out cylinder attached

Only attach the stretch hose to the vacuum cleaner with the lift out cylinder attached. The stretch hose can be attached directly to the accessory hose.

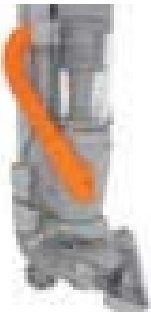

Pull and remove the accessory hose from the hose holder.

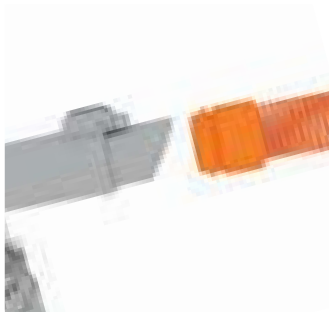

Attach the stretch hose to the end of the accessory hose.



Choose tool or extension tube.



Attach the tool or extension tube to the other end of the stretch hose.



If required attach tool to the end of the extension tube.



Press the On/Off button to switch the vacuum cleaner on.

Taking care of your machine

IMPORTANT: The motor is equipped with a thermal cut-out. If for any reason the machine should overheat, the thermostat will automatically turn the machine off. Switch off and unplug the vacuum cleaner. Check the machine for blockages and clean the filters. Wash the filters with warm water (40°C max) and leave for 24 hours or until fully dry before replacing into the machine.

For best cleaning results, filters should be tapped over a bin every 4-6 uses to remove dirt and debris and washed every 3 to 6 months (depending on the level of use). Don't use your vacuum cleaner without all of the filters in place.


Emptying and cleaning the dirt container



Press the dirt container release buttons located on one side of the carry handle.



Pull and remove the dirt container off the vacuum cleaner.

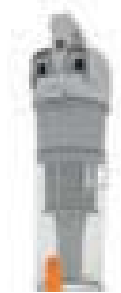

Hold the dirt container over a bin, press the dirt release button to open and allow the dirt to fall out.

Don't over fill the dirt container to avoid blocking the air flow through the vacuum cleaner and replace filters every 6-9 months.




Cleaning the pre-motor filter




Lift the dirt container lid release clip. In a hinge like manor lift the dirt container lid.



Pull the pre-motor filter tab and remove the filter from the dirt container.

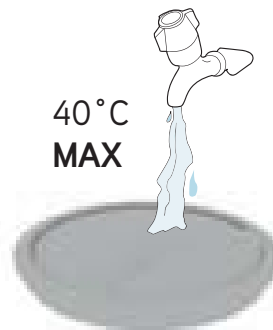

 Tap the filter over a bin to remove any dirt/debris. Wash the filter under running water (40 degrees max).



Leave for 24hrs or until fully dry before replacing.

Taking care of your machine

Cleaning the separator



Lift the dirt container lid release clip. In a hinge like manor lift the dirt container lid.



Pull the pre-motor filter tab and remove the filter from the dirt container.



Lift and remove separator out of dirt container. Using a soft brush remove any dirt/debris from separator.




Re fit the separator making sure the semi circular tab on the separator fits into the groove on the dirt container.

Post-motor filter maintenance

IMPORTANT: The post-motor filter is designed to offer long life with no maintenance. The filter should be checked periodically and when heavily discoloured it should be replaced. Please do not wash, scrub or brush the filter as this will damage the filter.



Twist the post-motor filter cover anti clockwise and remove.

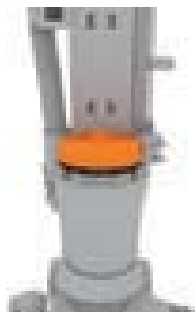

Lift and remove the post-motor filter.



Check the post-motor filter for any discolouration.



Don't use your vacuum cleaner without all of the filters in place.

CAUTION



Let's talk technical

IMPORTANT: Unplug and switch off vacuum cleaner before performing maintenance or troubleshooting checks. If the brushbar has been obstructed, the Motor Protection Sensor may have been activated.

Re-setting/removing debris from the brushbar



The brushbar indicator light will illuminate red and the brushbar will stop spinning if the brushbar is obstructed.



Switch the vacuum cleaner off and clear the obstruction from the brush bar. Stand the vacuum cleaner in the upright position to reset the brushbar.



Using a pair of scissors remove any threads or hair caught around the brush bar.



Place foot on the floor head and pull the handle backwards to recline.



Press the On/Off button to switch the vacuum cleaner on.



Press the brushbar button to activate the brushbar.

Changing the belt



Using a crosshead screwdriver, remove 3 screws from the belt cover on the side of the floorhead.



Pull to remove the belt cover.




Pull to remove the brushbar location plate. Remove belt.



Clean any debris from spindle. Place new belt onto spindle, lining up teeth on belt cover and onto cog.

Changing the brushbar/advanced brushbar cleaning

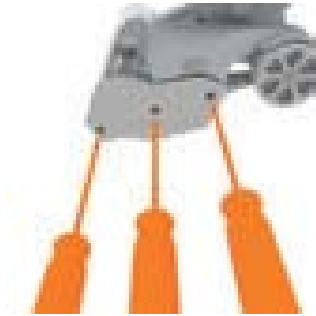

Using a crosshead screwdriver, remove 3 screws from the belt cover on the side of the floorhead.



Pull to remove the belt cover and brushbar location plate. Remove belt.



Lift and separate brushbar side cover.



Pull brushbar through side cover to remove.

Removing a blockage from the hose



Press the dirt container release buttons located on the side of the carry handle.



Pull and remove the dirt container off the vacuum cleaner.



Pull and remove the stretch hose from the hose holder.



Pull and stretch the stretch hose, any blockage in the hose should then be visible.

Using a broom handle or similar blunt instrument, push into the stretched out hose to remove blockage.



Removing dirt/debris from TurboTool



Slide the locking ring to remove.



Lift and separate the housing. Using a pair of scissors remove any threads or hair caught around the brushbar.



Line up the tabs on front of housing and re-fit. Slide locking ring into groove to secure.

What to do if it goes wrong

Problem

Solution

There is an accessory missing

- Check the 'This pack contains' panel on the box to make sure the part is included with your vacuum cleaner.

Why does my vacuum cleaner have no power?

- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug if this needs replacing, always replace with a 13amp British fuse.
- The motor thermostat may have tripped. If this has happened, unplug the vacuum cleaner. Remove and empty the dirt container and check the hose for blockages. Clean the filters and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filters you will need to wait 24 hours for the filters to fully dry before putting them back into the vacuum cleaner).

Why won't the vacuum cleaner pick up?

- The dirt container may not be fitted correctly, remove the dirt container and re-attach making sure it is clicked firmly into place.
- The air vent is open, reducing the suction. Go to 'Getting started'.
- The dirt container may be blocked, empty the dirt container and clean the filters. Go to 'Taking care of your machine'.
- There may be a blockage in the hose. Check and clear any blockages. Go to 'Let's talk technical'.
- The brushbar may not be turning. Go to my brushbar isn't turning below.
- If the accessory/tool will not pick up, check and clear any blockages. Go to 'Let's talk technical'.

Why isn't my brushbar rotating?

- The brushbar may not be turned on. Go to 'Getting started'.
- The vacuum cleaner may not be reclined. Go to 'Getting started'.
- The lift out cylinder may not be correctly assembled to the back panel and floor head. Go to 'Getting started'.
- The brushbar may be obstructed. Go to 'Let's talk technical'.
- The brush bar may need resetting. Go to 'Let's talk technical'.
- The belt maybe broken. Go to Let's talk technical.

Why is there a red light on my floorhead?

- The brush bar may be obstructed, check the brushbar and clear any hair or debris. Go to 'Let's talk technical'.

Why is dust escaping from the vacuum?

- The filters may not be correctly fitted. Go to 'Taking care of your machine'.
- The dirt container may be full or blocked. Go to 'Taking care of your machine'.
- The filters may need cleaning. Go to 'Taking care of your machine'.
- There may be a blockage in the hose. Go to 'Let's talk technical'.



It's quick and easy to register for your **FREE**

6 year guarantee[†]

Online at: vax.co.uk/guarantees

Please retain your original receipt for proof of purchase.

we're here if you need us

Online vax.co.uk/support

Call: (UK) **0330 026 8455** (ROI) 1-800-928-308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm*

Alternatively, you can write to us at:

Vax Ltd, Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, Worcestershire, WL9 0LW, UK

[†] Registration required. Terms and conditions apply, see vax.co.uk for details.

* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.


Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

Pro Cleaning Kit (Type 2)

1-1-133326-00

All our best tools all in one kit that makes cleaning your home quicker, easier and with even better results. We've taken care of cleaning all of the hard to reach areas such as on top of cupboards and in between blinds to the dust that collates behind and within the radiator.

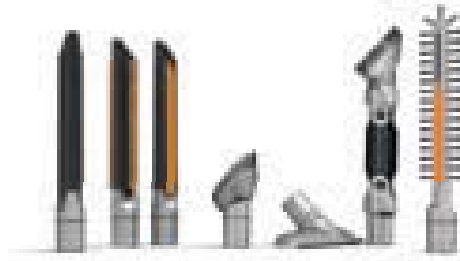

Filter Kit (Type 90)

1-1-134227-00





GET IN TOUCH

 0330 026 8455

 info@vax.co.uk

 vax.co.uk

 [VaxVacuums](https://www.facebook.com/VaxVacuums)

 [@VaxUK](https://twitter.com/VaxUK)

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the U84-AL-Pe manufactured in compliance with the following Directives: **Safety:** 2006/95/EC Low Voltage Directive.

EMC: 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2015 All rights reserved. VAX®, VAX Lozenge, are trade marks or registered trade marks of Techtronic Floor Care Technology Ltd.

